



## Headlights

### ► Type A

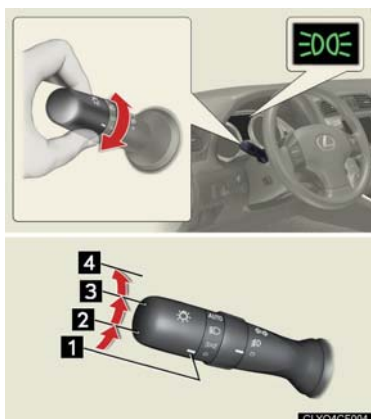


- 1 The daytime running lights turn on.
- 2 The side marker, parking (vehicles with halogen headlights), daytime running lights, tail, license plate and instrument panel lights turn on.
- 3 The headlights and all lights listed above (except daytime running lights) turn on.
- 4 **AUTO** The headlights, parking lights, daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

### ► Type B

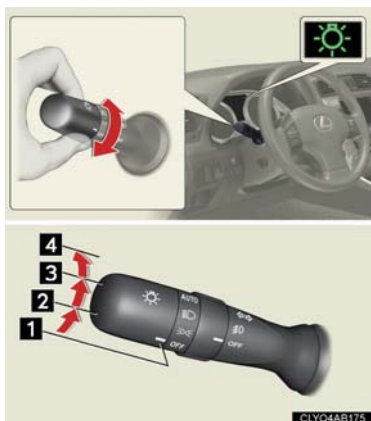



- 1 **OFF** The daytime running lights turn on.
- 2 The side marker, parking (vehicles with halogen headlights), daytime running lights, tail, license plate and instrument panel lights turn on.
- 3 The headlights and all lights listed above (except daytime running lights) turn on.
- 4 **AUTO** The headlights, parking lights, daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

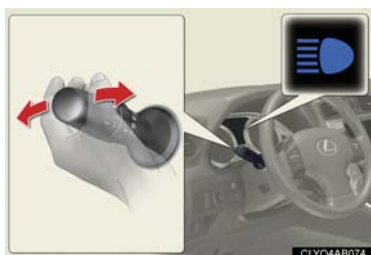



To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

## Fog Lights

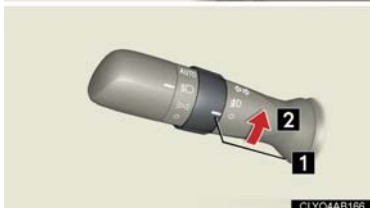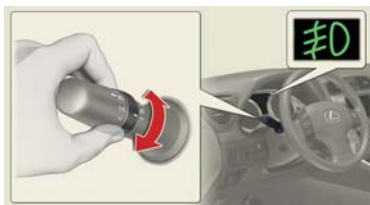
### ► Type A




The fog lights can be used only when the headlights (low beam) are on.

- 1  Turns the front fog lights off
- 2  Turns the front fog lights on

### ► Type B

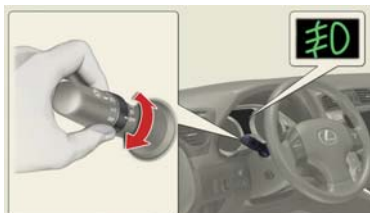


The fog lights can be used only when the headlights (low beam) are on.

- 1 **OFF** Turns the front fog lights off
- 2  Turns the front fog lights on

## Windshield Wipers and Washer


### Intermittent wiper with interval adjuster

#### ► Type A

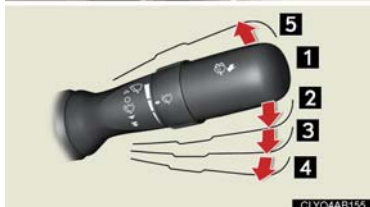

- 1 Off
  - 2 Intermittent windshield wiper operation
  - 3 Low speed windshield wiper operation
  - 4 High speed windshield wiper operation
  - 5 Temporary operation
- Releasing the lever returns to .


#### ► Type B

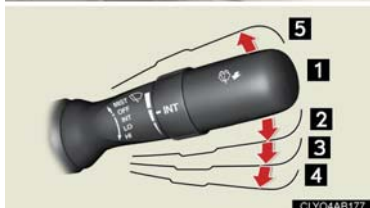

- 1 **OFF** Off
  - 2 **INT** Intermittent windshield wiper operation
  - 3 **LO** Low speed windshield wiper operation
  - 4 **HI** High speed windshield wiper operation
  - 5 **MIST** Temporary operation
- Releasing the lever returns to **OFF** .



Intermittent operation: Wiper interval can be adjusted by turning the band.

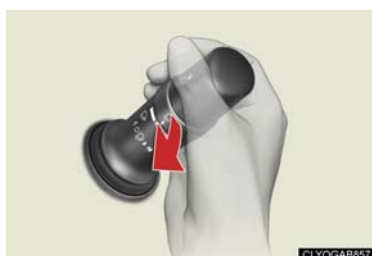

To spray washer fluid, pull the lever. The wipers will operate automatically.

## ■ Rain-sensing windshield wipers

### ► Type A



- 1 **○** Off
  - 2 **AUTO** Rain-sensing windshield wiper operation
  - 3 **▼** Low speed windshield wiper operation
  - 4 **▼▼** High speed windshield wiper operation
  - 5 **△** Temporary operation
- Releasing the lever returns to **○**.


### ► Type B



- 1 **OFF** Off
  - 2 **AUTO** Rain-sensing windshield wiper operation
  - 3 **LO** Low speed windshield wiper operation
  - 4 **HI** High speed windshield wiper operation
  - 5 **MIST** Temporary operation
- Releasing the lever returns to **OFF**.



Automatic operation: Sensitivity can be adjusted by turning the band.

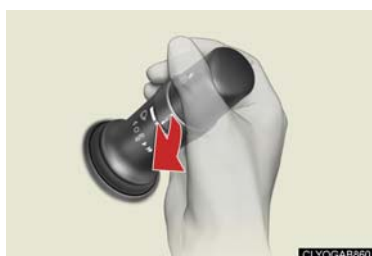

To spray washer fluid, pull the lever. The wipers will operate automatically.

## Rear Window and Outside Rear View Mirror Defoggers

### ► Without navigation system



To defog the rear window and the outside rear view mirrors, press the switch.

Press again to cancel.

### ► With navigation system



To defog the rear window and the outside rear view mirrors, press the switch.

Press again to cancel.

The system turns off automatically after 15 to 60 minutes.

## Instrument Panel Light Control



- 1 Darker
- 2 Brighter